

# Montageanleitung

assembly instructions

Instructions d'installation

heRAUSragend

# RAU.

ARBEITSPLATZEINRICHTUNGEN

Lochwand für Gestellfuß


Perforated panel for frame base

Panneau perforé pour pied de bâti

**1**


09-LW-S7-650  
09-LW-S7-850

 SW6	<b>A</b>	6x $\varnothing 22 \times 6$ mm	
	<b>B</b>	4x M4 x 6 mm	
	<b>C</b>	2x 3,9 x 13 mm	

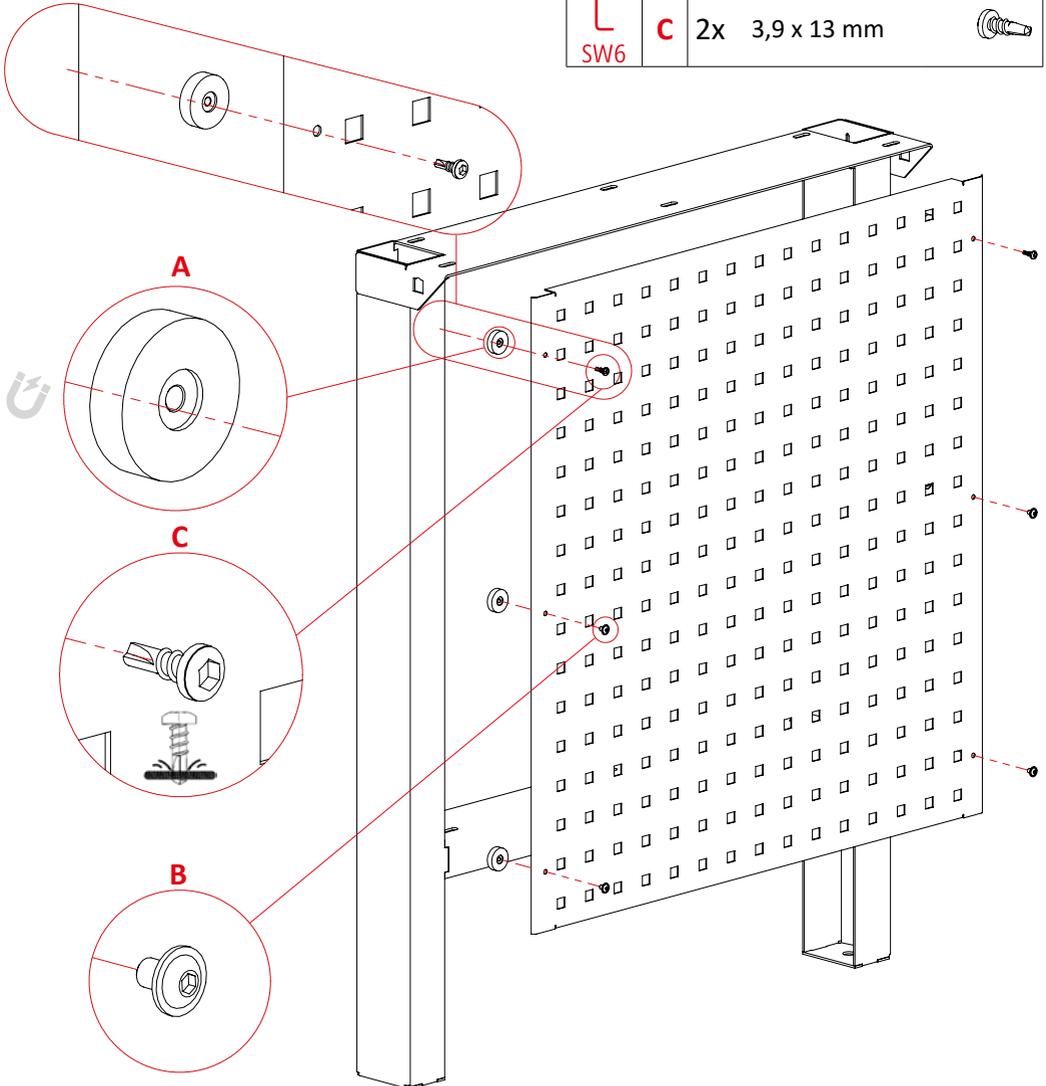

**1**09-LW-S7-650  
09-LW-S7-850

 SW6	<b>A</b> 6x $\varnothing 22 \times 6$ mm 
	<b>B</b> 6x M4 x 6 mm 


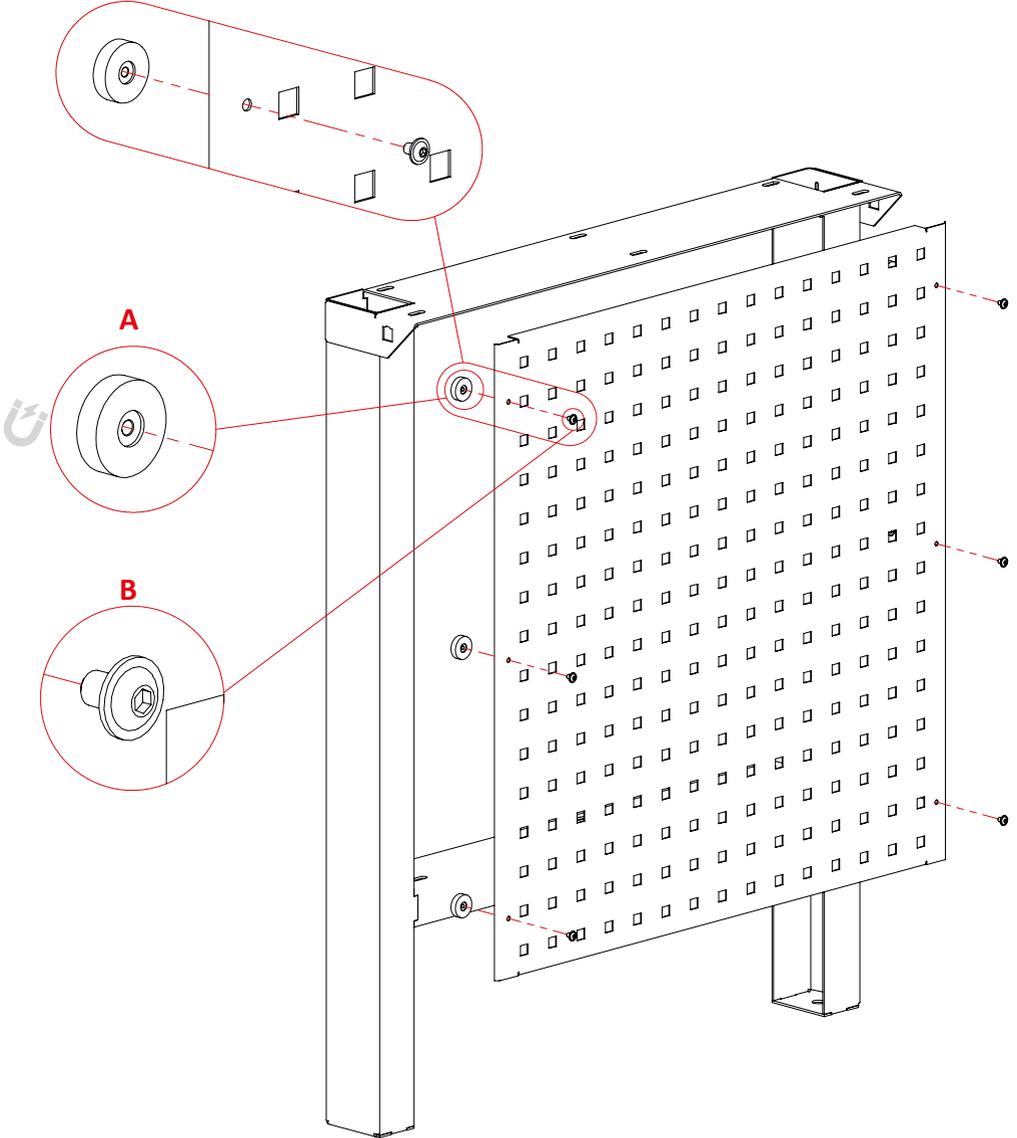


2

09-LW-S8-650  
09-LW-S8-850



  SW6	<b>A</b> 6x $\varnothing 22 \times 6$ mm 
	<b>B</b> 4x M4 x 6 mm 
	<b>C</b> 2x 3,9 x 13 mm 

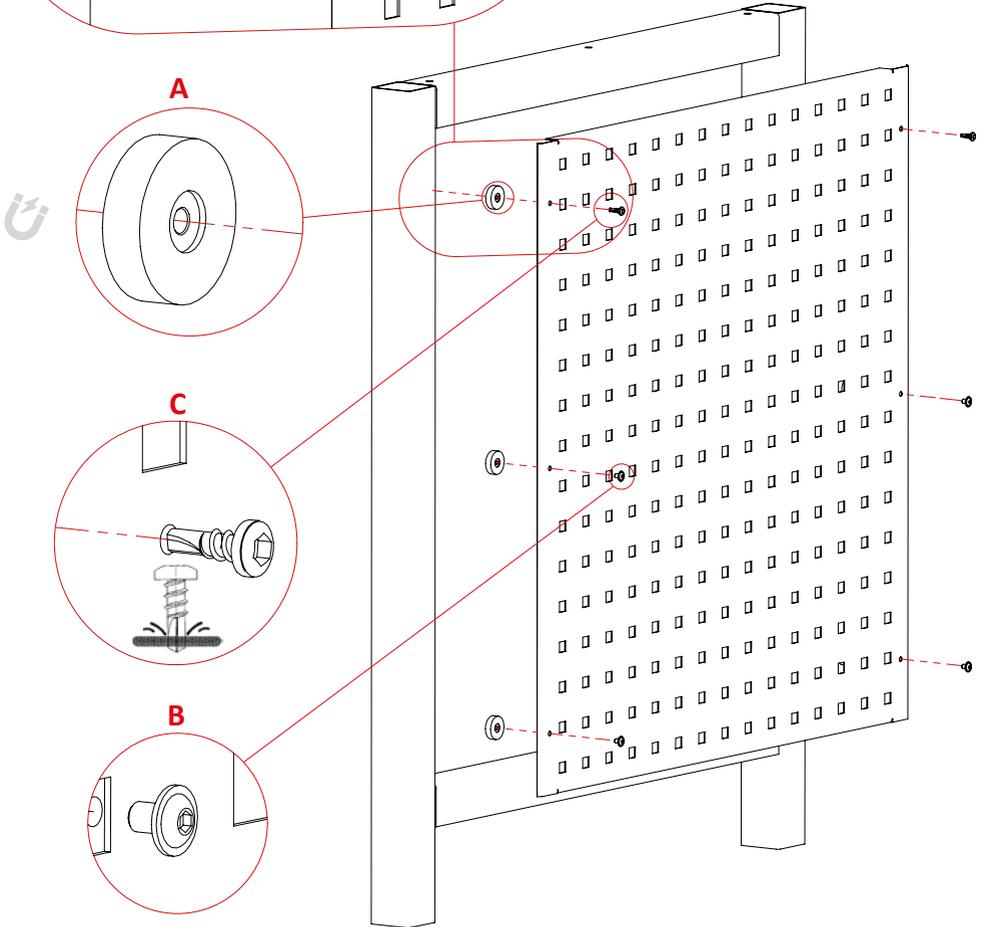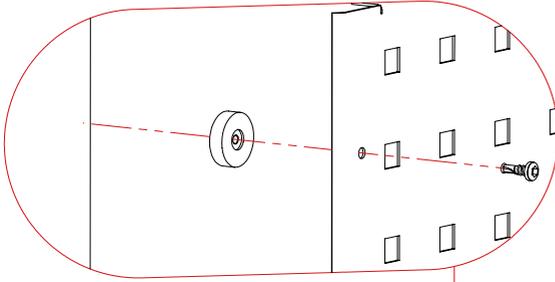

2

09-LW-S8-650  
09-LW-S8-850



 SW6	<b>A</b> 6x $\varnothing$ 22 x 6 mm 
	<b>B</b> 6x M4 x 6 mm 

